

**使用上のご注意** 製品の誤用・劣化・動作を防止するために必ずお読みください

■本製品は操作終了後、10分経過すると自動的に電源が切れる省電力構造になっております。(カセット中を除く)  
 ●ご使用前に電池カバーを開け、絶縁シートを取り除いてください。  
 ●お使いになる際、表示が消えている場合には電源を入れてからご使用ください。本体正面のいずれかのボタンを押すと電源が入ります。


●落としたり、ぶつけたり、強いショックを与えないでください。  
 ●誤って鍵などの中に入ると、2、3、コントロールやリセットのボタンが取り付いて使用しなくなります。  
 ●故障の原因になりますので、次のような場所のご使用はお避けください。  
 ・強い磁気や強い振動がある所：大型エアコンや大型モーターの近くでは、センサーが止まったり、電子部品が壊れることがあります。  
 ・電子レンジの上部やレンジの扉の部分が相互に接触したり、変色することがあります。  
 ・温度が40℃以上になる所：直射日光が当たる所、暖房器具の熱風や熱が当たる所、コンロやテレビなど熱を出す器具に近い所、その他火気に近い所など。  
 ・温度が0℃以下になる所：0℃(氷点)以下では液晶表示の反応が遅く、読みにくくなります。  
 ・ほりの多い所  
 ・料理の調理場など、多量の油分が発生する所  
 ・浴室など湿気の多い所、水のかかる所  
 ・湿度が急激に変化する所

●殺虫剤・ヘアスプレーなどが、かからないようにしてください。  
 ●冷蔵庫などの扉面に付けたままキーを押すと、落下し破損する場合があります。センサーのセットは必ず手に持って行ってください。


**Cautions on use**

■ This product has a power-saving configuration: 10 minutes after the product has ceased operation, the power will automatically turn off (excludes the time the timer is in use).  
 ■ Please open the battery cover and remove the insulation sheet before use.  
 ■ Should the display be out (not be showing), turn the power on before use. The power can be turned on by pressing any button on the front of the timer.  
 ● Do not drop, knock or jolt.  
 ● Dropping the timer by accident into pots and the like is dangerous; ensure that you do not affix the timer above the stove or cooking range.  
 ● To avoid malfunctions, do not use the timer in the following places:  
 ・ places where there is a strong magnetic field or that is prone to vibrations: near large speaker and monitors, the timer may stop or the electronic components may break  
 ・ on top of vinyl tablecloths: the part of the timer touching the vinyl may change color  
 ・ places where the temperature exceeds 40°C: places that are in direct sunlight, places where the timer may come into contact with heat or heated air from heating appliances  
 ・ places where the temperature is lower than 0°C (freezing point), the liquid crystal display becomes slow to respond and hard to read  
 ・ places where there is a build-up of dust  
 ・ places where there is a lot of oil, such as kitchens in restaurants  
 ・ places that are very humid or where the timer may become wet, such as bathrooms  
 ・ places where there are sudden changes in temperature

● Ensure that the timer does not come into contact with insecticide, hair spray and the like.  
 ● The timer may fall and become damaged when the keys are pressed when it is still attached to wall surfaces such as refrigerators; ensure that you have the timer in your hand when you set it.

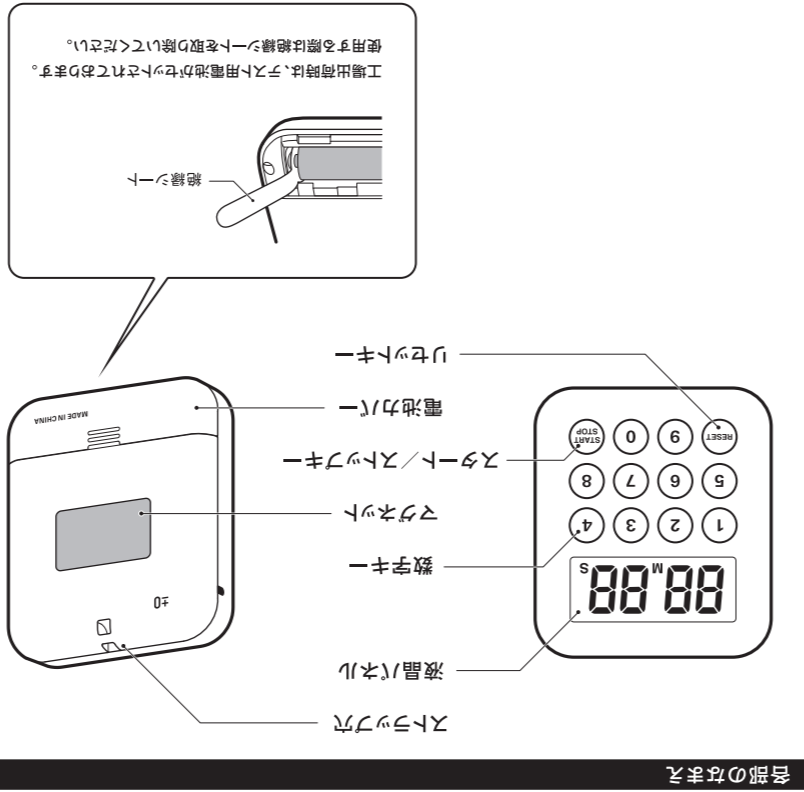

各部の名まえ

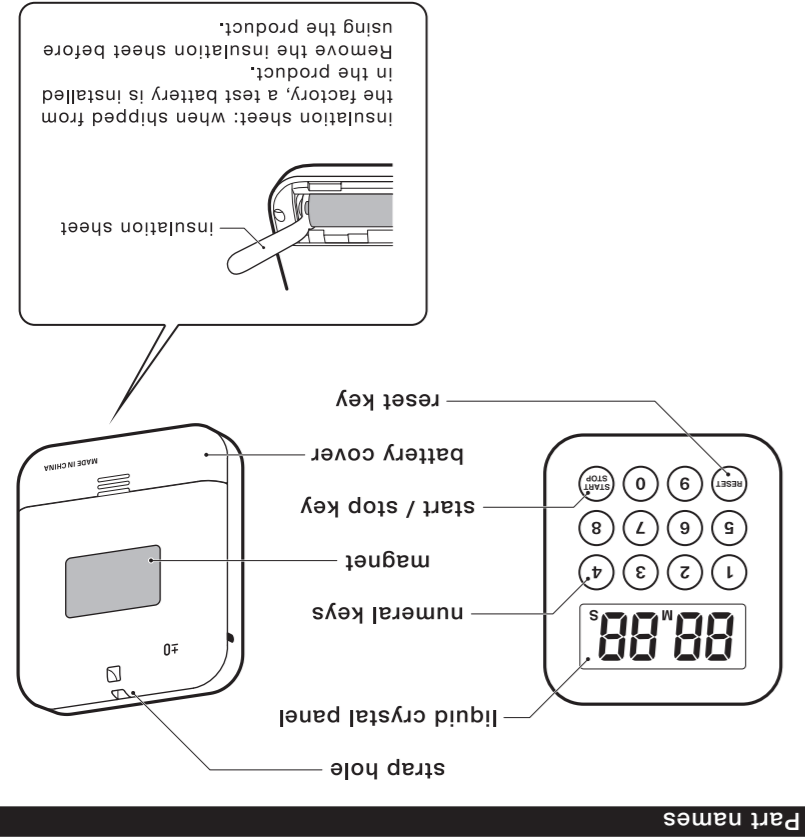

Part names

**Please read to ensure safe use**

The warnings and cautions shown here contain important safety information for the prevention of harm to you and other people.

<b>⚠ WARNING</b>	Failure to adhere to the warnings noted here may result in death or serious injury.
<b>⚠ CAUTION</b>	Failure to adhere to the cautions noted here may result in personal injury or physical damage to equipment.

<b>⚠ WARNING</b>	<p>&lt;Regarding alkaline batteries&gt;</p> <ul style="list-style-type: none"> <li>● Do not place batteries in fires, short, disassemble or heat them. Failure to adhere to this may result in the inner alkaline solution leaking and entering the eyes, resulting in fevers or rupturing.</li> </ul>
<b>⚠ CAUTION</b>	<p>&lt;Regarding batteries&gt;</p> <ul style="list-style-type: none"> <li>● Please keep batteries out of the reach of children.</li> <li>● Please ensure that batteries are inserted in the correct direction.</li> <li>● When not using the timer for extended periods of time, or when the timer no longer rings, please remove the batteries from the timer. Failure to do so may lead to the contents of the battery leaking which may result in problems in operation.</li> <li>● Do not wet.</li> <li>● These batteries are not rechargeable.</li> <li>● Do not solder directly.</li> </ul> <p>&lt;Regarding the magnet&gt;</p> <ul style="list-style-type: none"> <li>● The magnet on the back of the timer can be used to affix the timer to the refrigerator or other metal surfaces; please ensure that the product does not fall off with any shakes or blows.</li> <li>● The magnet coming into contact with magnetized cards (cash cards etc) may result in the information recorded being compromised. Do not bring into contact with medical electronics, electronic devices (such as computers), magnetic cards, floppy discs or other devices that react adversely to magnetic fields.</li> </ul>

**安全に正しくお使いいただくために 必ずお守りください**

ここに示した注意事項は、あなたや他の人々への危害や損害を未然に防止するための、安全に関する重要な内容です。ので、必ずお守りください。

<b>⚠ 警告</b>	この表示を無視して、誤った取り扱いをすると、人が死亡または重傷を負う可能性が想定される内容を示します。
<b>⚠ 注意</b>	この表示を無視して、誤った取り扱いをすると、人が損害を負う可能性および物的損害が想定される内容を示します。

<b>⚠ 警告</b>	<p>&lt;アルカリ電池について&gt;</p> <ul style="list-style-type: none"> <li>●電池は火に入れたり、ショート、分解、加熱などしないでください。アルカリ性溶液がもれて目に入ったり、発熱、破裂の原因となります。</li> </ul>
<b>⚠ 注意</b>	<p>&lt;電池について&gt;</p> <ul style="list-style-type: none"> <li>●電池は幼児の手の届かないところに置いてください。</li> <li>●⊕⊖を正しく入れてください。</li> <li>●タイマーを長い間使わないときやアラームが鳴らなくなった場合には、電池をはずしてください。そのまま放置しますと、中の液がもれ、故障の原因となります。</li> <li>●電池には水滴をつけないでください。</li> <li>●この電池は充電式ではありません。</li> <li>●電池に直接ハンダ付けしないでください。</li> </ul> <p>&lt;マグネットについて&gt;</p> <ul style="list-style-type: none"> <li>●本体表面のマグネットで冷蔵庫などの金属塗装面に付けられますが、衝撃や振動等で落ちないことを確かめてください。</li> <li>●マグネットと磁気カード(キャッシュカードなど)を重ねると磁気カードに記憶されている内容が損なわれることがあります。電子医療機器、電子機器(パソコンなど)、磁気カード、フロッピーディスクなど磁気を嫌うものには近づけないでください。</li> </ul>

取扱説明書・保証書には商品の色記号の表示を省略しています。包装箱に表示している形名の( )内の記号が色記号です。

**±0**

**Digital 10-key Timer**

**デジタル10キータイマー ZKK-V110**

**取扱説明書(保証書付)**

ご購入あげいただき、まことにありがとうございました。この取扱説明書(保証書付)をよくお読みのうえ、正しくお使いください。ご使用前に、「安全に正しくお使いいただくために」を必ずお読みください。この取扱説明書(保証書付)はいつでも見ることができるところに必ず保管してください。

**±0 保証書 持込修理**

品名	デジタル10キータイマー	形名	ZKK-V110	取扱販売店名・住所・電話番号
お客様様	お名前 ふりがな ご住所 〒 ( )			
保証期間	お買上げ年月日 年 月 日より 1年間 ただし消耗品は除く			

この保証書は、本書記載内容の範囲で無料修理をさせていただきますことをお約束するものです。保証期間中に故障が発生した場合は、±0カスタマーサポートセンターに修理をご依頼のうえ、本書をご提示ください。お買上げ年月日、販売店名などの記入漏れがありますと無効です。記入のない場合は、お買上げの販売店にお申し出ください。ご転居、ご購入などでお買上げの販売店に修理をご依頼できない場合は、±0カスタマーサポートセンターにお問い合わせください。本書は再発行いたしません。大切に保管してください。

- <無料修理規定>**
- 取扱説明書・本体注意ラベルなどの注意書に従った正常な使用状態で、保証期間内に故障した場合には ±0 カスタマーサポートセンターが無料修理いたします。
  - 保証期間内でも、次の場合には有料修理となります。
    - 本書のご提示がない場合。
    - 本書にお買上げ年月日・お客様名・販売店名の記入がない場合、または字句を書き換えられた場合。
    - 使用上の誤り、または不当な修理や改造による故障・損傷。
    - お買上げ後の取付場所の移動、または落とされた場合などによる故障・損傷。
    - 火災・公害・異常電圧・定格外の使用電源(電圧・周波数)および地震・雷・風水害その他天災地変など、外部に原因がある故障・損傷。
    - 取扱説明書に記載されている使用条件以外で使用したときの故障または損傷。
    - 業務用としての使用、車両・船舶への搭載など一般家庭以外に使用された場合などによる故障・損傷。
    - ご使用後のキズ・汚れ・変色および保証上の不備による損傷。
    - 消耗品品の交換・仕様変更など。
  - 本書は日本国内においてのみ有効です。 This warranty is valid only in Japan.
  - 個人情報の取扱いについて  
 本保証書にご記入いただいたお客様の個人情報は、保証期間内のサービス活動や保証期間経過後の安全点検活動のために利用させていただきます。お客様の個人情報は当社にて厳重に管理いたしますが、修理のために、当社から修理委託する保守会社などに必要なお客様の個人情報を預託する場合がございます。その場合は当社が厳重に管理いたしますので、あわせてご了承ください。
- ★この保証書は本書に明示した期間・条件のもとにおいて無料修理をお約束するものです。従いましてこの保証書によってお客様の法律上の権利を制限するものではありませんので保証期間経過後の修理などにつきましておわかりにならない場合はお買上げの販売店、または ±0 カスタマーサポートセンターにお問い合わせください。
- ★保証期間経過後の修理または修理用性能部品の保有期間につきまして、詳しくは取扱説明書をご覧ください。