

## 使いかた・お手入れのしかた

### タイマーのセット方法

#### カウントダウン機能

1. (RESET) キーを押して、液晶パネルの表示を **00.00** にします。

2. (1) ~ (0) の数字キーを押して計る時間をセットします。

- 最大99分99秒まで1秒単位でセットできます。

例) 5分25秒に設定する場合 (5) (2) (5) と続けて押します。

**05.25**

30分00秒に設定する場合 (3) (0) (0) (0) と続けて押します。

**30.00**

3. (START/STOP) キーを押すとタイマーがスタートします。

- タイマー作動中に (START/STOP) キーを押すと、タイマーが一時的に停止します。

もう一度 (START/STOP) キーを押すと、その時点から再作動します。

4. セットした時間がくるとアラームが約60秒間、鳴り続けます。

- アラームを止める時は (START/STOP) キーを押してください。

数字の (0) キーを使って **00.00** をセットすると、キーがロックされてセットができなくなります。

その場合は、(START/STOP) キーを押して、カウントアップを動作させてから (RESET) キーを押すとロックが解除されます。

### 表示を **00.00** に戻す方法 / セット時間を変更する方法

(RESET) キーを押して、液晶パネルの表示を **00.00** にし、計る時間を新たにセットしなおしてください。

#### メモリー機能

アラームを (START/STOP) キーで止めたり、約60秒間鳴り終わると、自動的に前セットした時間が表示されます。

そのまま (START/STOP) キーを押せばタイマーがスタートします。

#### カウントアップ機能

1. (RESET) キーを押して、液晶パネルの表示を **00.00** にします。


2. (START/STOP) キーを押すとタイマーがスタートします。

3. (START/STOP) キーを押すとタイマーは止まります。**59.59** までカウントアップすると **00.00** の表示にもどり、カウント


アップを続けます。

### 電池の交換方法 | 使用電池：単4形電池1本

1. タイマー裏面の電池カバーを矢印の方向に開けて、使用済みの電池を取り出します。

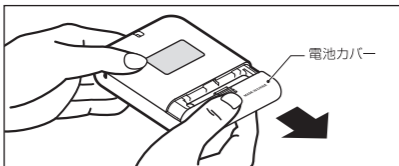

2. 新しい電池の ⊕ ⊖ を正しくセットします。次に、電池カバーの上のツメを本体に差し込んでカチッと音がするまで、指で押して閉めます。

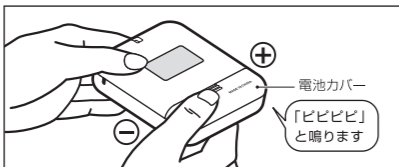

### お手入れのしかた

汚れを落とすときは、中性洗剤を少量含ませた布でふき、その後乾いた布でふいてください。

## 仕様

品名	デジタル10キータイマー
形名	ZKK-V110
外形寸法	約H76×W66×D22mm
質量	約60g
使用温度範囲	0℃～+40℃
常温でのタイマー精度	±0.10% (99分99秒セットの場合±5秒) ※常温=+5℃～+35℃
アラーム	電子音・鳴り時間 約60秒間
セット時間	最大99分99秒まで秒単位でセット
使用電池	単4形電池(1本)
電池寿命(新品の場合)	約1年(1日2回、タイマーを99分99秒セットした場合)
材質	ABS樹脂、シリコンゴム
付属品	テスト用電池1個、取扱説明書(保証書付)

※お買い上げのタイマーにセットされている電池は、製品点検のため工場出荷時より付けられているテスト用電池です。寿命は製品仕様の表示より短いことがあります。

## アフターサービスについて

### 保証書

●この商品には保証書が付いています。保証書は必ず「お買い上げ日・取扱販売店名」等所定事項の記入および記載内容をお確かめのうえ、お買い上げ販売店からお受け取りいただき、大切に保管してください。

●保証期間は、お買い上げ日から1年間です。

### 修理を依頼されるときは

●保証期間中の修理…保証書の記載内容により、±0カスタマーサポートセンターが修理いたします。くわしくは、保証書をご覧ください。

●保証期間が過ぎているとき…±0カスタマーサポートセンターにご相談ください。修理により使用できる場合には、お客様のご要望により有償修理いたします。

### 補修用性能部品の保有期間

●当社は、この商品の補修用性能部品を製造打切後、6年保有しています。

性能部品とは、その製品の機能を維持するために必要な部品です。

### アフターサービスのお問い合わせ

●修理に関するご相談ならびにご不明な点などは、±0カスタマーサポートセンターにお問い合わせください。

※製品に異常のある場合に、お客様ご自身で修理されたり手を加えたりすることは大変危険です。絶対にしないでください。

## お客様ご相談窓口のご案内

修理・お取り扱い・お手入れについてのご相談ならびにご依頼は下記へご連絡ください。

### ±0 カスタマーサポートセンター

 **0570-01-5380**

受付時間：月～金曜日(除く祭日)10～17時

メールでのお問い合わせ: <http://www.plusminuszero.jp/support/>

呼び出し音の前に、NTTより通話料金の目安をお知らせいたします。

(注) なお、上記番号はPHSではご利用いただけません。おそれいりますが、一般の電話か携帯電話をご利用ください。

## Use and care of the product

### How to set the timer

#### Count down function

1. Press the (RESET) key; set the liquid crystal display to **00.00**.

2. Press the (1) - (0) keys to set the time to be measured.

- the timer can be set in 1 second increments up to 99 minutes 99 seconds

E.G. to set a time of 5 minutes 25 seconds, press (5) (2) (5)

**05.25**

to set a time of 30 minutes 00 seconds, press (3) (0) (0) (0)

**30.00**

3. Press the (START/STOP) key to start the timer.

- the timer will temporarily stop if the (START/STOP) key is pressed during operation.

Press the (START/STOP) key once more to continue operation.

4. When the set time is reached, an alarm will continue to sound for one minute.

- press the (START/STOP) key to turn the alarm off.

Using the (0) key and setting the timer to **00.00** locks the keys so that the timer cannot be set. Press the (START/STOP) key to bring the count up function into operation, then press the (RESET) key; the lock will be terminated.

### Returning the display to **00.00** / Changing the set time

Press the (RESET) key and set the liquid crystal panel display to **00.00**; key in the new time to be measured.

#### Memory function

When the alarm is stopped using the (START/STOP) key or it stops sounding after 60 seconds, the display returns automatically to the previously set time.

Press the (START/STOP) key to start the timer.

#### Count up function

1. Press the (RESET) key and set the display to **00.00**.


2. Press the (START/STOP) key and the timer starts.

3. Press the (START/STOP) key and the timer stops. When the timer counts up to **59.59**, the display returns to


**00.00** and the count up continues.

### Replacing the battery | battery requirement: AAA battery × 1

1. Open the battery cover at the back of the timer in the direction of the arrow and remove the batteries.

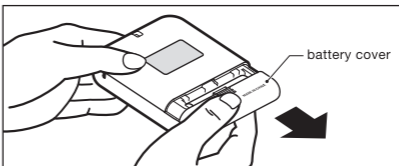

2. Insert the new batteries, ensuring that they are in the correct direction. Next, insert the tab on top of the battery cover into the back of the timer and press down until there is a click.

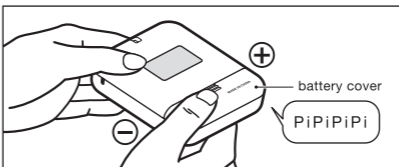

### Care Instructions

To remove dirt, wipe over with a cloth moistened with a small amount of mild detergent, then wipe over with a dry cloth.

## Specifications

Product name	Digital 10-key Timer
Product code	ZKK-V110
Outer dimensions	approx. H76 x W66 x D22mm
Weight	approx. 60g
Operating temperature limit	0°C ~ +40°C
Precision at room temperature	±0.10% (±5 seconds when set to 99 minutes 99 seconds) ※ room temperature = +5°C ~ +35°C
Alarm	electronic sound alarm time: approx 60 seconds
Set time	maximum 99 minutes 99 seconds in 1-second increments
Battery	AAA battery × 1
Battery life (when new)	approx 1 year (when the timer is set to 99 minutes 99 seconds twice per day)
Material	ABS plastic, silicon rubber
Included	test battery × 1 / instruction manual

※ The battery set in the product you purchase is a test battery used to check the product at the time the product is shipped from the factory. The battery life may therefore be shorter than noted in the battery life specifications.