

±0

取扱説明書（保証書）

2.5R LCD Alarm Clock

ZZT-R010

2.5R LCDアラームクロック

お買い上げいただき、まことにありがとうございます。この取扱説明書をよくお読みのうえ、正しくお使いください。ご使用前に「安全に正しくお使いいただくために」を必ずお読みください。この取扱説明書は、いつでも見ることができるところに必ず保存してください。

1 安全に正しくお使いいただくために

ここに示した注意事項は、製品を安全にお使いいただき、あなたや他の人々への危害や損害を未然に防止するための、安全に関する重要な内容ですので、必ずお守りください。

【表示の意味】

	警告	この表示を無視して、誤った取り扱いをすると、人が死亡または重傷を負う可能性が想定される内容を示します。
	注意	この表示を無視して、誤った取り扱いをすると、人が損害を負う可能性および物的損害の発生が想定される内容を示します。

【絵表示の例】

	記号は禁止事項を示します。図の中や近くに具体的な禁止内容が表示されています。（左図の場合は「改造禁止」を示します。）
	記号は強制・指示事項を示します。図の中や近くに必ず守らなければならない行為の具体的な内容が表示されています。

	警告
	電池を誤使用すると発熱・破裂・液漏れの恐れがあります。下記に注意してください。
	● 電池は＋（プラスマイナス）を正しくセットしてください。
	● 電池はショートさせたり充電、分解、加熱、火の中に入れてたりしないでください。
	● 本製品から電池を取り出した場合は、幼児の手の届かないところに保管してください。万一飲み込んだ場合には、ただちに医師にご相談ください。

発売元 プラマイゼロ株式会社 <http://www.plusminuszero.jp>
〒107-0062 東京都港区南青山5-10-13 デコパーシェ南青山ビル 2F

©PLUS MINUS ZERO CO.,LTD.2008
発行年月 08年2月 Printed in CHINA

	注意
	● 電池は長期間使用しないときははずしてください。液漏れ等で故障の原因になります。
	● 本製品を修理・改造しないでください。ケガをしたり、発火や故障、異常動作の原因となることがあります。
	● 日の当たる自動車内・直射日光の当たる場所・暖房器具の近くなど高温になる場所に置かないでください。変形や故障の原因になります。
	● この製品は防水構造にはなっていませんので、水や飲料など液体がかかる場所での使用や保存は避けてください。
	● この製品は精密な電子部品で構成されていますので、「湿気やホコリの多い場所」、「強い磁気のある場所」、「はげしい振動のある場所」でのご使用や保管をさせていただきます。
	● 落としたり、ぶつけたり、強いショックを与えないでください。大きな力が加わり、壊れることがあります。
	● お手入れにはかわいた柔らかい布を使用してください。揮発性の液体（シンナー、ベンジンなど）や、ぬれた布などを使用すると、変質したり色が変わったりすることがあります。

■ELパネルについて
バックライト照明用として使用しているELパネル（エレクトロルミネッセンス）は、長期間使用すると明るさが徐々に弱くなり、光が暗く見えることがあります。パネルの特性によるものですのでご了承ください。

■ELパネルについて
バックライト照明用として使用しているELパネル（エレクトロルミネッセンス）は、長期間使用すると明るさが徐々に弱くなり、光が暗く見えることがあります。パネルの特性によるものですのでご了承ください。

発売元 プラマイゼロ株式会社 <http://www.plusminuszero.jp>
〒107-0062 東京都港区南青山5-10-13 デコパーシェ南青山ビル 2F

©PLUS MINUS ZERO CO.,LTD.2008
発行年月 08年2月 Printed in CHINA

■スヌーズ機能

アラーム音が鳴っている時に、上面の3つのボタンのいずれかを押すと、アラーム音が一時的に停止し、アラームマークが点滅します。アラーム音が停止してから約5分後に再びアラーム音が鳴ります。

スヌーズ機能の解除方法

アラーム音を一時停止してスヌーズ機能が働いている間に、[MODE]ボタンと[LIGHT]ボタンの2つを同時に押すと、スヌーズ機能がキャンセルされます。（アラーム設定はそのまま残ります。）

	ご注意
	● アラーム音は約3分間鳴り続けます。
	● アラームの報音中にボタンを押して音を止めないと、スヌーズ機能は働きません。
	● アラーム設定中（アラームマークが表示された状態）のときは、24時間後の同じ時刻に再びアラームが鳴ります。

8 バックライト

[LIGHT]バックライトボタンを押すと約5秒間バックライトが点灯します。

9 スタンド

スタンドを起こすと角度を付けて置くことができます。スタンドは90度以上無理に広げないでください。破損の原因になります。

10 製品仕様

- 精度：平均月差±30秒以内
- アラーム機能：スヌーズ機能、時報機能
- スヌーズ機能：約5分
- アラーム音：電子音
- 報音時間：約3分
- バックライト：ELパネル
- 使用温度：0℃～50℃
- 電源：単3型乾電池×1本
- 電池寿命：約1年（アラーム1分/日、バックライト20秒/日使用した場合）
- 外形寸法：W58.5mm × H58.5mm × D29.3mm
- 付属品：モニター用電池1個（本体収納）、取扱説明書（本書）

保証書（持込修理）

この保証書は、本記載内容で無料修理を行うことをお約束するものです。

2.5R LCDアラームクロック		形名：ZZT-R010
★お客様お名前	様	★電話番号 () -
★ご住所	〒	
★取扱販売店名、住所、電話番号		
★お買い上げ日	年 月 日	保証期間 お買い上げ日から1年間

★印欄に記入のない場合は無効となりますから必ずご確認ください。

無料修理規定

1. お買い上げの日から上記無償期間中に、取扱説明書、注意文に従った正常な使用状態で万一故障が生じた場合には、下記の保証規定により±0生活家電修理・技術センターにて無料修理いたしますので、本保証書をご提示のうえ、修理をご依頼ください。
2. 保証期間内でも次のような場合には有料修理となります。
 - イ. 使用上の誤り、または改造や不当な修理による故障または損傷。
 - ロ. お買い上げ後の落下、輸送、取扱上の不注意起因による故障または損傷。
 - ハ. 火災・地震・水害・落雷・その他の天変地変ならびに公害や異常電圧その他の外部要因による故障または損傷。
 - ニ. 業務用としての使用、車両・船舶への搭載など一般家庭用以外に使用された場合の故障または損傷。
 - ホ. 本書の提示がない場合。
 - ヘ. 本書にお買い上げ年月日、お客様名、販売店名の記入のない場合、あるいは字句を書き換えられた場合。
 - ト. 消耗部品の交換、仕様変更など
3. 保証期間内でも商品を修理窓口へ送付された場合の送料や、出張修理を行った場合の出張料は、お客様のご負担となります。
4. ご転居の場合や、ご贈答品の修理のご依頼は、±0生活家電修理・技術センターにご相談ください。
5. 本書は日本国内においてのみ有効です。 **This warranty is valid only in Japan.**
6. 本書は再発行いたしませんので紛失しないよう大切に保存してください。

- この保証書は本書に明示した期間、条件のもとにおいて無料修理をお約束するものです。従ってこの保証書によって、お客様の法律上の権利を制限するものではありませんので、保証期間経過後の修理等についてご不明の場合は、±0生活家電修理・技術センターにお問い合わせください。
- 保証期間経過後の修理、補修用性能部品の保有期間について詳しくは、アフターサービスについてのご覧ください。


個人情報のお取り扱いについて

本保証書にご記入いただいたお客様の個人情報は、保証期間内のサービス活動や保証期間経過後の安全点検活動のために利用させていただく場合がございますので、ご了承ください。お客様の個人情報は当社にて厳重に管理いたしますが、修理のために、当社から修理委託する保守会社などに必要なお客様の個人情報を委託する場合がございます。その場合は当社が厳重に管理いたしますのであわせてご了承ください。

ご相談窓口

±0生活家電修理・技術センター
 0570-01-5380
受付時間：月～金曜日（除く祝日）10～17時
FAX: 0570-07-5380

2 各部の名称

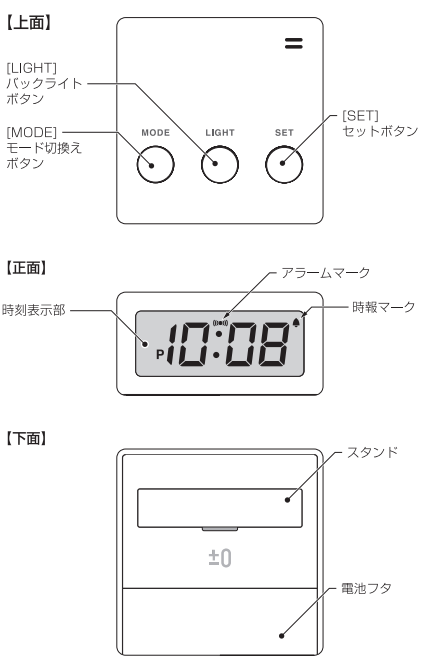

3 電源について

本製品は単3型乾電池を1本使用します。

- ご購入時にはモニター用の電池が入っていますので、絶縁シートを抜き取ってご使用ください。
- 付属のモニター用電池は、本書記載の電池寿命に満たないことがありますのでご了承ください。
- 付属の電池は充電式ではありませんので、絶対に充電しないでください。

11 アフターサービスについて

■保証書（この取扱説明書に印刷されています）

- この商品には保証書が付いています。お買い上げの販売店で「販売店名・お買い上げ日」などの記入をご確認のうえ、内容をよくお読みのあと大切に保管してください。保証期間はお買い上げ日より1年間です。

■修理を依頼されるときは

- 保証期間中は、保証書の記載内容により修理いたしますので、下記の±0生活家電修理・技術センターにお申し付けください。
- 保証期間が過ぎているときは、下記の±0生活家電修理・技術センターにご相談ください。修理により使用できる場合には、お客様のご要望により有償修理いたします。

■補修用性能部品の保有期間

- 当社は、この商品の機能を維持するために必要な補修用性能部品を製造打ち切り後6年間保有しています。性能部品とは、その商品の機能を維持するために必要な部品です。

■アフターサービスのお問い合わせ

- 修理に関するご相談ならびに不明な点などは、下記の±0生活家電修理・技術センターにお問い合わせください。


お客様ご相談窓口のご案内	
修理・お取り扱い・お手入れについての相談ならびにご依頼は下記にご連絡ください。	
±0生活家電修理・技術センター	0570-01-5380 受付時間：月～金曜日（除く祝日）10～17時 〒999-8102 長野県安曇野市三郷温3868 FAX: 0570-07-5380
±0製品に関するお問い合わせは・・・	
±0コミュニケーションセンター	0570-01-5300 受付時間：月～金曜日（除く祝日）10～17時

当ダイヤルは、全国どこからでも一律料金でご利用いただけます。呼び出し音の前に、NTTより通話料金の目安をお知らせいたします。（注）なお、上記番号はPHSではご利用いただけません。おそれいりますが一般の電話か携帯電話をご利用ください。

		This symbol [crossed-out wheeled bin WEEE Annex IV] indicates separate collection of waste electrical and electronic equipment in the EU countries. Please do not throw the equipment into the domestic refuse. Please use the return and collection systems available in your country for the disposal of this product. This product conform to WEEE standards.
--	--	--

2 Component names


[Top]

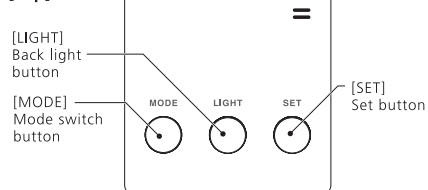

[Front]



[Bottom]

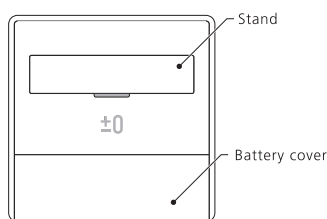

3 Power supply

This clock uses one AA dry cell battery.

- Please note that a monitor battery is installed in the clock at the time of purchase and the clock should be used by removing the insulation sheet.
- Please also note that this monitor battery may not last as long as stated in this user guide.
- The monitor battery included is not rechargeable and should not be recharged under any circumstances.

4 How to replace battery

- 1 Open the battery cover and remove the old battery.
- 2 Insert a new battery in the battery holder ensuring the + – positions are correct. (Do not insert the battery in the wrong direction.)
- 3 Replace the battery cover.

Note

- Ensure the battery is inserted in the right direction.
- Always use a new battery when replacing the battery.
- Please remove the battery when it is depleted and the clock stops moving or when you do not intend to use the clock for a long period of time.

5 Display modes

With each press of the mode switch button, the display will switch between modes in the following order: <Time Display mode> → <Alarm Display mode> → <Calendar Display mode> → <Seconds Display mode>.

<Time Display mode>

Displays the time (hours, minutes).

<Alarm Display mode>

Displays the time the alarm has been set to ring. If no action is taken, the clock will return to the <Time Display mode> after 2 or 3 seconds.

<Calendar Display mode>

Displays the date (month, day).

<Seconds Display mode>

Displays the time (seconds). The seconds count can be reset by pressing the [SET] button. Scrolling through [:01] to [:30] will adjust the seconds during the same minute, and scrolling through [:31] to [:59] will go to the next minute and the seconds will be reset to 00. This function is useful when adjusting the time in seconds.

6 Setting the time

- 1 Switch to the <Time Display mode> by pressing the [MODE] mode switch button.
- 2 Press the [SET] set button 4 times to switch to the "year" set display. Set the year using the [MODE] button. The numbers will change.
 - * When the [MODE] button is pressed down for awhile, it will fast forward.
- 3 Press the [SET] button again to set the "months", "days", "hours", and "minutes" in the same way by pressing the [MODE] button.
 - * You can choose either a 12 hour display or a 24 hour display when setting the hours. When scrolling through the numbers while pressing the [MODE] button, the letters A, P, and H will be displayed in order on the right hand side of the colon (:). A: 12 hour display (AM); P: 12 hour display (PM); H: 24 hour display.
- 4 Press the [SET] button to complete the time setting. Press the [MODE] button to return to the <Time Display mode>.

7 Using the alarm and time signal

■ Setting and canceling the alarm and time signal

Press the [SET] button once while in the <Time Display mode> and switch to the alarm/time signal setting display. The numbers will flash when setting the alarm/time.

- To set the alarm, press the [MODE] button and activate the alarm indicator.
- To set the time signal, press the [MODE] button and activate the time signal indicator.
- To cancel the alarm and time signal, press the [MODE] button and turn off each indicator.
- To set both the alarm and the time signal, activate both indicators.

■ Set the alarm time

Press the [SET] button again to switch to the alarm "hours" set display and press the [MODE] button to set the "hours". Then, press the [SET] button to switch to the alarm "minutes" set display and press the [MODE] button in the same way to set the "minutes". After the alarm time has been set, press the [SET] button to complete the process.

■ Snooze function

Pressing one of the three buttons on the top of the clock while the alarm is ringing will temporarily stop the alarm and the alarm mark will flash. The alarm will start to ring again after approximately 5 minutes.

Canceling the snooze function

The snooze function can be cancelled by simultaneously pressing the [MODE] button and the [LIGHT] button when the alarm has stopped ringing and the snooze function is activated. (The alarm setting will remain unchanged.)

Note

- The alarm will ring for approximately three minutes.
- Pressing a button while the alarm is ringing will stop the alarm and activate the snooze function.
- When the alarm has been set (and the alarm indicator is displayed), the alarm will ring again at the same time 24 hours later.

8 Back light

The back light will light up for 5 seconds when the [LIGHT] back light button is pressed.

9 Stand

The stand can be positioned in an angle. However, do not extend the stand over a 90 degree angle. It may break.

10 Specifications

- **Accuracy:** Average of ± 30 seconds a month
- **Alarm function:** Snooze function, Time signal
- **Snooze function:** Approx. five minutes
- **Alarm sound:** Electronic sound
- **Length of sound:** Approx. three minutes
- **Back light:** EL panel
- **Operating temperature:** 0 °C to 50 °C
- **Power source:** One AA dry cell battery
- **Battery life:** Approx. one year (the alarm uses 1 minute/day and the back light uses 20 seconds/day)
- **External dimensions:** 58.5mm(W) x 58.5mm(H) x 29.3mm(D)
- **Accessories:** One monitor battery (installed at time of shipment), user guide (this document)